

ToughLock™ 5G Installation Instructions

Preparations

The surface of the floor must be clean, dry and stable.

Any polish, dirt, paint, etc must be removed from the job surface.

The floor surface must be flat and leveled with a scraper and putty knife.

Maintain the room temperature above 59° F (15°c) before installation.

Check that the doors can still open and close after the floor has been installed (minimum + 3/8")

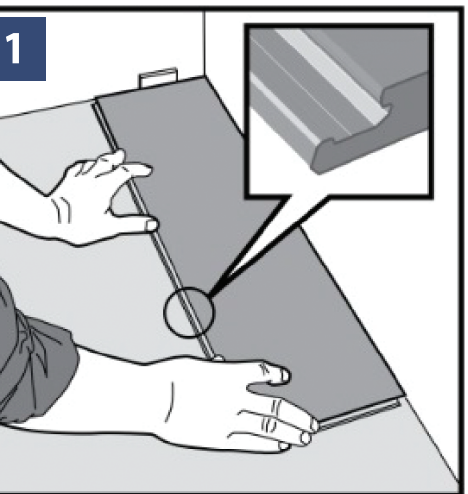


FIG 1
First plank, first row.
Place a spacer with predicted thickness to the left and position the plank against the wall.

Later, after 3 rows, you can easily position the flooring against the front wall with predicted spacers.

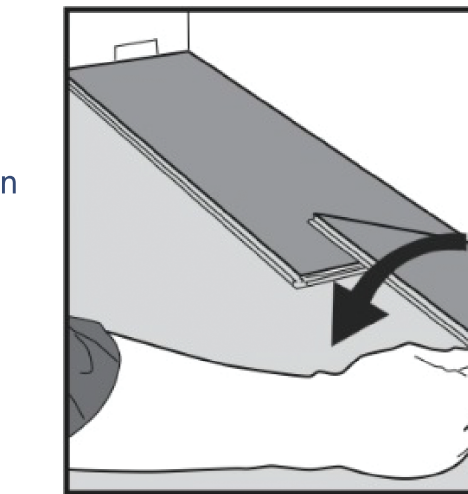


FIG 3
Fold it down with a single action movement.
During the fold down, make sure the panels are close to each other.

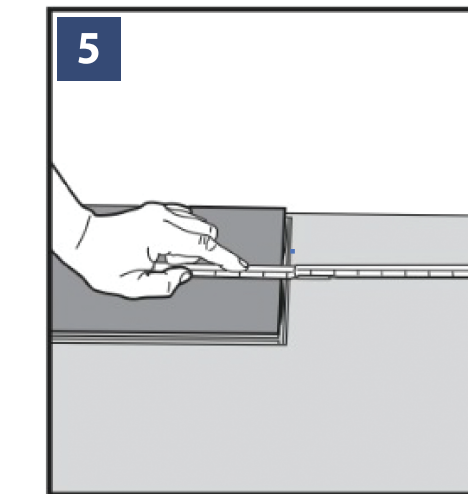


FIG 5
At the end of the first row, put a spacer to the wall and measure the length of the last plank to fit.

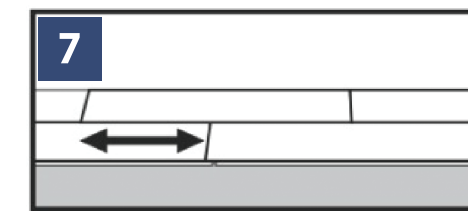


FIG 7
Staggered joint distance i.e. minimum distance between short ends of planks in parallel rows shall not be less than the given length.

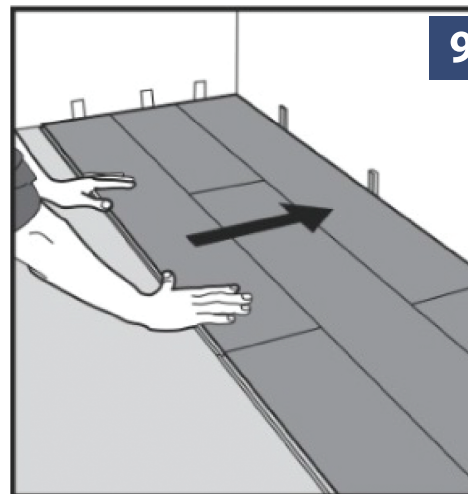


FIG 9
After 2-3 rows.
Adjust the distance to the front wall by placing spacers.



FIG 11
Separate the whole row by carefully lifting up and release the whole row.
Fold up the row and release the whole long side.

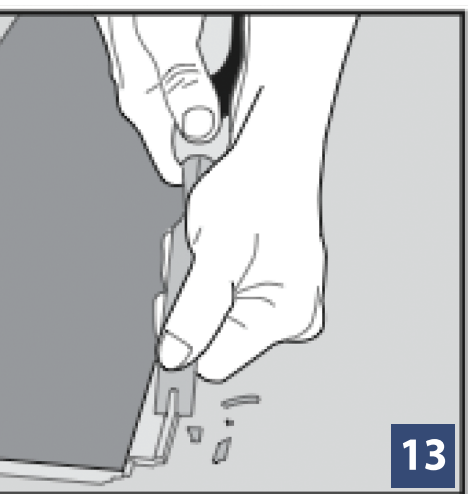


FIG 13-14
Cut off the vertical locking part of the strip with a chisel, put applicable glue on the strip and push the planks horizontally together. If necessary place some spacers between last board and the wall during the hardening.

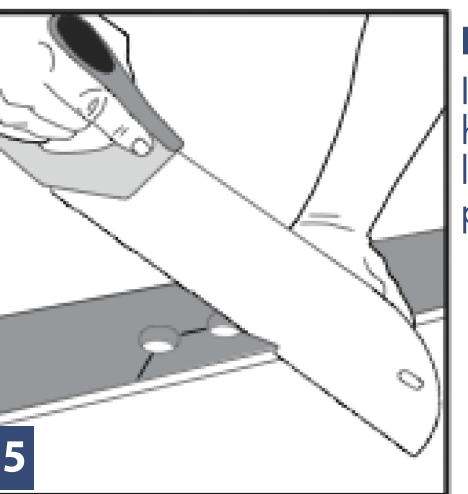


FIG 15-16
Installation at radiators. Drill the holes 2 x spacer thickness larger, than the diameter of the pipes.

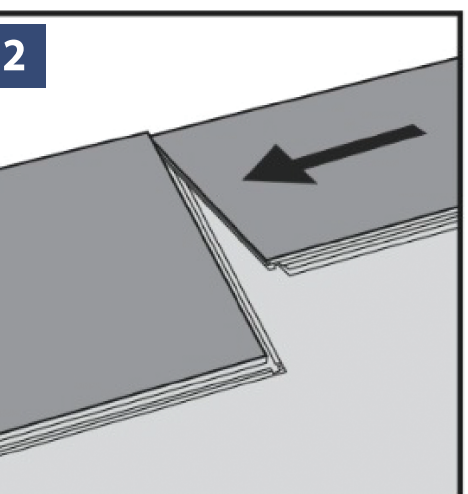


FIG 2
Second plank, first row.
Place this plank gently close to the short end of the first one.

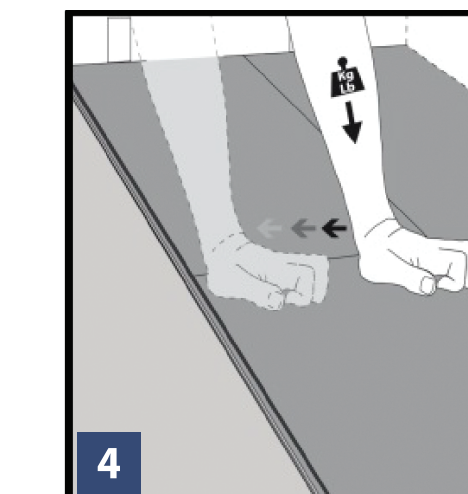


FIG 4
Afterwards press slightly along the short end just installed.

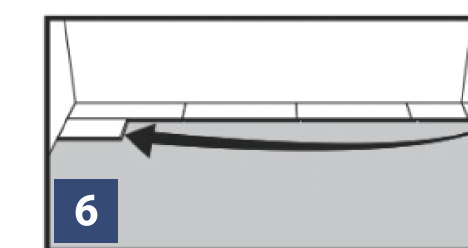


FIG 6
Second row
First plank min length 500 mm.
Put a spacer against the left wall.

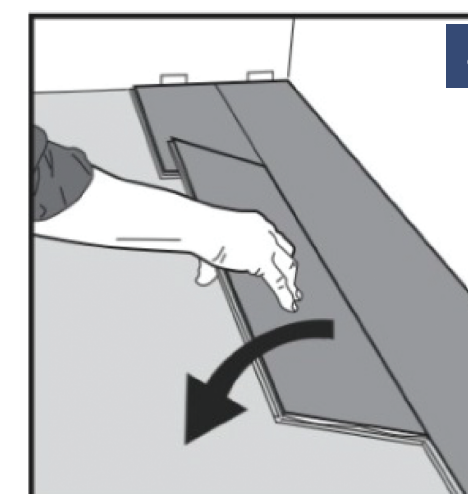


FIG 8
Second plank second row.
Place the panel gently and close to the short end of the previous panel and fold it down in a single action movement.

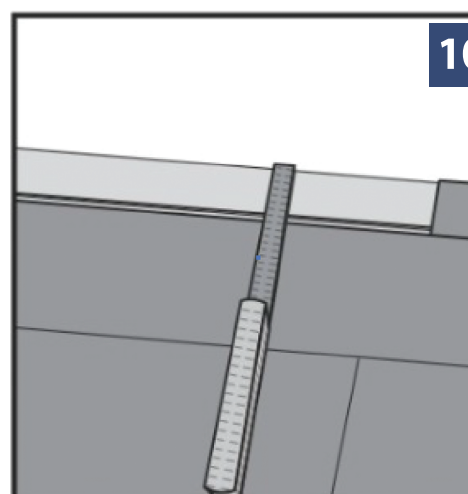


FIG 10
Last row (and perhaps also first row).
Minimum width 50 mm.
Place a spacer to the wall before measuring.
Cut the panels lengthwise including the flexible tongues.



FIG 12
Disassemble the panels by sliding the short ends horizontally.
Do not fold up a panel, as this damage the profile.

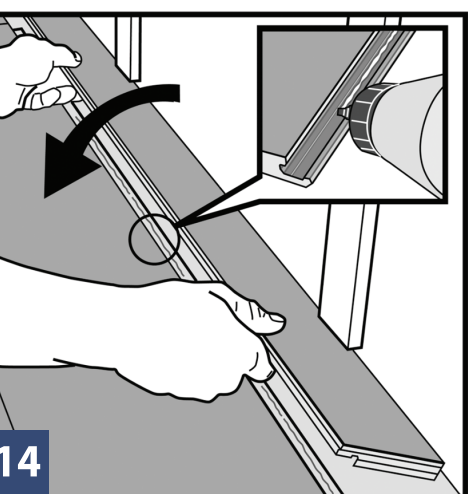


FIG 14
Cut off the vertical locking part of the strip with a chisel, put applicable glue on the strip and push the planks horizontally together. If necessary place some spacers between last board and the wall during the hardening.

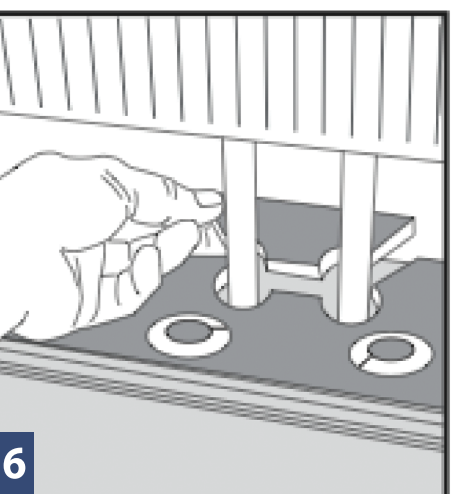


FIG 16
Installation at radiators. Drill the holes 2 x spacer thickness larger, than the diameter of the pipes.